

## WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

## For the Customers in Canada

**CAUTION:**  
TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

## Before You Begin

Thank you for choosing the Sony Dream Machine. The Dream Machine will give you many hours of reliable service and listening pleasure.

Before operating your unit, please read these instructions thoroughly and retain them for future reference.

The instructions here are for models ICF-C253 and ICF-C253L.  
Their difference is shown below:

Model Number	ICF-C253	ICF-C253L
Band	FM/AM	FM/MW/LW

## Features

- Dual alarm FM/AM (ICF-C253) or FM/MW/LW (ICF-C253L) PLL (phase locked loop) synthesized clock radio.
- LCD with backlight, and brightness adjustment for the backlight.
- Date button to display the year, month and day.
- Easy radio preset—with the pressing of a button.
- D.S.T. (Daylight Saving Time)—Summer time adjustment (one-hour skip function).
- 5 random station presets.
- Radio and buzzer alarms.
- Extendable snooze—snooze time can be extended from 8 to 60 minutes in maximum every time you use.

## Setting the Clock and date

- Set the alarm setting dial to **ALARM MODE OFF**.
- Plug in the clock radio.  
The display will flash "AM 12:00" or "0:00".
- Press **CLOCK** for a few seconds.  
You will hear a beep and the year will start to flash in the display.
- Press **CLOCK** + or – until the correct year appears in the display.
- Press **CLOCK** once.
- Repeat steps 4 and 5 to set the month, day, hour, and minute.  
After setting the minute, press **CLOCK** to start the counting of the seconds, and you will hear two short beeps.

- To display the year and date, press **SNOOZE/DATE/SLEEP OFF** once for the date, and within 2 seconds press it again for the year. The display shows the date or year for a few seconds and then changes back to the current time.
- To set the current time rapidly, hold down **CLOCK** + or –.
- The clock system varies depending on the model you own.
  - 12-hour system: "AM 12:00" = midnight
  - 24-hour system: "0:00" = midnight
- In step 6, when you press **CLOCK** after the minute setting to activate the clock, the seconds start counting from zero.
- When the alarm setting dial is set to **ALARM TIME SET A** or **B**, the clock cannot be set.

## To change the display to the daylight saving time (summer time) indication

Press D.S.T./SUMMER T.  
"★" is displayed and the time indication changes to summer time.  
To deactivate the summer time function, press D.S.T./SUMMER T. again.

## To set the brightness of the backlight

Set **BRIGHTNESS** for the display to H (high) or L (low) according to your preference.

## Operating the Radio Manual Tuning

- Press **RADIO ON** to turn on the radio.  
The display shows the band and frequency for a few seconds and then changes back to the current time.
- Press **BAND** repeatedly to select the desired band.  
The FM channel step is set to 0.1MHz and the AM (MW) channel step is set to 10kHz (North and South American model).  
The FM channel step is set to 0.05MHz\* and the AM (MW) channel step is set to 9kHz (Other models).
- Use **TUNING** + or – to tune in to the desired station.  
When **CLOCK** + or – is held down, the displayed time initially changes in one-minute steps, and after a few seconds, switches to ten-minute steps.

\* The FM frequency display is raised or lowered by a step of 0.1 MHz. For example, frequency 88.00 and 88.05 MHz is displayed as "88.0 MHz."

- Two short beeps sound when the minimum frequency of each band is received during tuning.

- Adjust volume using **VOL**.
- To turn off the radio, press **RADIO OFF**.
- To listen with an earphone, connect the earphone to the (earphone) jack. The speaker is deactivated when an earphone is connected (ICF-C253 for European model only).

- To improve reception:
  - FM: Extend the FM wire antenna fully to increase reception sensitivity.
  - AM(MW)/LW: Rotate the unit horizontally for optimum reception. A ferrite bar is built in to the unit.
- Do not operate the unit over a steel desk or metal surface, as this may lead to interference of reception.

- To check the station being received, press **TUNING** + or – lightly. The display shows the band and frequency for a few seconds and then changes back to the current time.
- If the radio alarm comes on while the radio is on, the unit switches to the station on preset button 1 (**WAKE UP STATION**).

## Preset Tuning

You can preset up to five stations for one-touch tuning; one for each of the preset buttons 1 to 5.

## Presetting a station

- Example: To preset AM 1260 kHz onto preset button 2.
- Press **RADIO ON** to turn on the radio.
  - Tune in to the station you want to preset.  
(See "Manual Tuning".)
  - Hold down the desired **STATION-SELECT/PRESET** button (in this case, 2) until you hear two short beeps.



The display shows the frequency for a few seconds and then changes back to the current time.

For the radio alarm, preset the station to be used as the alarm onto preset button 1.

## To change a preset station

- Tune in manually to the station you want to store and hold down the preset button until you hear two short beeps. The previously stored station will be replaced by the new one.
- Tuning in to a preset station**
- Press **RADIO ON** to turn on the radio.
  - Press **STATION-SELECT/PRESET** where the desired station is stored.
  - Adjust volume using **VOL**.  
After a few seconds, the display will return to the current time but the preset button number will remain.

## Setting the Alarm

Before setting the time for the radio and buzzer alarms, make sure you have set the current time (See "Setting the Clock and date").

## To Set the Alarm Time

- Set the alarm setting dial to either **ALARM TIME SET A** (radio) or **ALARM TIME SET B** (buzzer).  
After one beep, the indicator or and the alarm time set in the previous time will flash in the display.
- Press **CLOCK** + or – until the desired time appears.  
When **CLOCK** + or – is held down, the displayed time initially changes in one-minute steps, and after a few seconds, switches to ten-minute steps.
- Set the alarm setting dial to **ALARM MODE OFF**. Two short beeps will confirm the setting.

- When the alarm setting dial to **ALARM TIME SET A** or **B**, the radio will be interrupted.

## To Activate the Alarm

Set the alarm setting dial to the desired alarm mode (radio, buzzer, or radio and buzzer), and the indicator(s) you chose will be lit.

Alarm	Set the alarm setting dial to	Lighting indicator
Radio	<b>A RADIO</b>	
Buzzer	<b>B BUZZER</b>	
Radio and Buzzer	<b>A + B</b>	

When the radio alarm is activated, the radio station that is preset on the preset button 1 (**WAKE UP STATION**) turns on at the preset time. For the radio alarm, make sure you have preset a radio station onto preset button 1 (See "Preset Tuning").

## To Check the Alarm Time

Press **ALARM TIME CHECK**.  
The display shows the alarm time for a few seconds and then returns to show the current time. When the alarm setting dial is set to either **ALARM MODE OFF** or **ALARM MODE A + B**, the alarm time in **ALARM MODE A RADIO** and then **ALARM MODE B BUZZER** appears in the display.

- Alarm time in **ALARM MODE A RADIO** and **ALARM MODE B BUZZER** is set at AM 12:00 or 0:00 when you purchased the unit.

## ALARM ON —

When the alarm comes on at the preset time, the alarm indicator flashes.

For the buzzer alarm, the beeping of the alarm becomes more rapid after every few seconds in five progressive stages.

- When both the radio and buzzer alarms are set for the same time, and you choose **ALARM MODE A + B**, the radio alarm takes precedence.

## To Doze for a Few More Minutes

Press **SNOOZE/DATE/SLEEP OFF**.  
The radio or buzzer turns off but will automatically come on again after about 8 minutes. Every time you press **SNOOZE/DATE/SLEEP OFF**, the snooze time changes as follows:

8 → 16 → 24 → 32  
→ 40 → 48 → 56 → 60

The display shows the snooze time for a few seconds and returns to show the current time. When you press **SNOOZE/DATE/SLEEP OFF** after the current time appeared, the snooze time starts from 8 minutes again.

- The maximum length of the snooze time is 60 minutes.

## ALARM OFF —

The alarm is turned off automatically after 60 minutes.

## To Stop the Alarm

Press **ALARM RESET** to turn off the alarm.  
The alarm will come on again at the same time the next day.

## To Cancel the Alarm

Set the alarm setting dial to **ALARM MODE OFF**.

## Setting the Sleep Timer

You can enjoy falling asleep to the radio using the built-in sleep timer that turns off the radio automatically after a preset duration.

## Press SLEEP.

The radio turns on. You can set the sleep timer to durations of 90, 60, 30, or 15 minutes. Every push changes the display as follows.

On → 90 → 60  
→ 15 → 30 →

Two short beeps sound when the display returns to "On".  
"Sleep" will appear in the display when the duration time is set.  
The radio will play for the time you set, then shut off.

- To turn off the radio before the preset time, press **SNOOZE/DATE/SLEEP OFF**.

## To Use Both Sleep Timer and Alarm

You can fall asleep to the radio and also be awakened by the radio or buzzer alarm at the preset time.

- Set the alarm. (See "Setting the Alarm".)
- Set the sleep timer. (See "Setting the Sleep Timer".)

## Troubleshooting

Should any problem occur with the unit, make the following simple checks to determine whether or not servicing is required.  
If the problem persists, consult your nearest Sony dealer.

## The clock does not show the correct time.

- Has an electrical power outage lasting more than 1 minute occurred?

The radio or buzzer alarm does not sound at the preset alarm time.

- Has the desired radio or buzzer alarm been activated? (i.e. Is the indicator or lit?)

- Has a station been preset onto preset button 1?
- Has **VOL** been adjusted?

No sound comes from the speakers.  
Hasn't the alarm setting dial been remained setting to **ALARM TIME SET**?

## Precautions

- Operate the unit on the power sources specified in "Specifications".
- The nameplate indicating voltage, etc. is located at the bottom of the unit.
- To disconnect the power cord (mains lead), pull it out the plug, not by the cord.
- Do not leave the unit in a location near a heat source such as a radiator or airturf, or in a place subject to direct sunlight, excessive dust, mechanical vibration, or shock.
- Do not place the unit on surfaces (rugs, blankets, etc.) or near materials (curtains, draperies) that block the ventilation holes.
- Should any liquid or solid object fall into the unit, unplug the unit and have it checked by qualified personnel before operating it further.
- When the casing becomes soiled, clean it with a soft cloth dampened with a mild detergent solution. Never use abrasive cleaners or chemical solvents, as they may mar the casing.
- The unit is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the unit itself has been turned off.
- Do not connect the antenna lead to an external antenna.

If you have any questions, please consult your nearest Sony dealer.

## Specifications

Time display	
UK, Australia, North and South America	12 hour
Other countries	24 hour

Frequency range		
Model for North and South America		
Band	ICF-C253	Channel step
FM	87.5-108 MHz	0.1 MHz
AM	530-1.710 kHz	10 kHz

Model for other countries			
Band	ICF-C253	ICF-C253L	Channel step
FM	87.5-108 MHz	87.5-108 MHz	0.05 MHz
AM(MW)	531-1.602 kHz	531-1.602 kHz	9 kHz
LW	—	153-279 kHz	9 kHz

Speaker  
Approx. 6.6 cm (2 5/8 in.) dia.

Output  
 (earphone) jack (ø 3.5 mm minijack) (ICF-C253 for European model only)

Power output  
200 mW (at 10% harmonic distortion)

Power requirements  
North and South American model: 120 V AC, 60 Hz

Australian model: 240 V AC, 50 Hz  
Other model: 220-230 V AC, 50 Hz

Dimensions  
Approx. 180.5 × 55 × 140 mm (w/h/d)  
(7 1/8 × 2 1/4 × 5 5/8 in.) incl. projecting parts and controls

Mass  
Approx. 640g (1 lb 7 oz)  
ICF-C253L (UK model)  
Approx. 660 g (1 lb 8 oz)

Design and specifications are subject to change without notice.

## AVERTISSEMENT

Pour éviter tout risque d'incendie ou d'électrocution, n'exposez pas l'appareil à la pluie ni à l'humidité.

Afin d'écarter tout risque d'électrocution, n'ouvrez pas le coffret. Confiez les réparations exclusivement à un technicien qualifié.

## Pour les utilisateurs au Canada

**ATTENTION:**  
POUR ÉVITER LES CHOCs ÉLECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU'AU FOND.

## Avant la mise en service

Nous vous remercions d'avoir choisi ce radio-réveil Dream Machine Sony. Il vous procurera de nombreuses heures de fonctionnement fiable et de plaisir d'écoute.  
Avant d'utiliser le radio-réveil, lisez attentivement tout ce mode d'emploi et conservez-le pour pouvoir vous y reporter ultérieurement.

Ce mode d'emploi couvre les modèles ICF-C253 et ICF-C253L.  
Les différences entre ces modèles sont les suivantes:

Numéro de modèle	ICF-C253	ICF-C253L
Gamme	FM/AM	FM/PO/GO

## Caractéristiques

- Radio-réveil FM/AM (ICF-C253) ou FM/PO/GO (ICF-C253L) PLL (phase locked loop) (boucle à phase asservie) et double alarme.
- Écran LCD à rétroéclairage et réglage d'intensité lumineuse du rétroéclairage.
- Touche de date pour l'indication de l'année, du mois et du jour.
- Préréglage radio simple – par pression d'une seule touche.
- Heure d'éte (D.S.T.) – Réglage de l'heure d'été (avance automatique d'une heure).
- 5 préréglages de stations aléatoires.
- Alarmes radio et sonnerie.
- Alarme répétée extensible – le temps peut être prolongé de 8 à 60 minutes au maximum à chaque emploi.

## Réglage de l'heure et de la date.

- Meltez la molette de réglage de l'alarme sur **ALARM MODE OFF**.
- Branchez le radio-réveil sur le secteur. "AM 12:00" ou "0:00" clignote sur l'afficheur.
- Appuyez sur **CLOCK** pendant quelques secondes.  
Vous entendez un bip et l'année se met à clignoter sur l'afficheur.
- Appuyez sur **CLOCK** + ou – jusqu'à ce que l'année correcte apparaisse sur l'afficheur.
- Appuyez une fois sur **CLOCK**.
- Répétez les étapes 4 et 5 pour régler le mois, le jour, les heures et les minutes. Après avoir réglé les minutes, appuyez sur **CLOCK** pour activer les secondes. Vous devez entendre deux brefs bips.

- Pour afficher l'année et la date, appuyez une fois sur **SNOOZE/DATE/SLEEP OFF** pour la date et une nouvelle fois en l'espace de 2 secondes pour l'année. La date ou l'année reste affichée pendant quelques secondes, puis l'heure réapparaît.
- Pour régler l'heure plus rapidement, tenez **CLOCK** + ou – enfoncée.
- Le format de l'heure varie en fonction du modèle.  
Format de 12 heures: "AM 12:00" = minuit  
Format de 24 heures: "0:00" = minuit
- À l'étape 6, lorsque vous appuyez sur **CLOCK** après le réglage des minutes pour mettre l'horloge en marche, le compte des secondes commence à zéro.
- Lorsque la molette de réglage de l'alarme est sur **ALARM TIME SET A** ou **B**, l'horloge ne peut pas être réglée.

## Pour afficher l'heure d'été

Appuyez sur D.S.T./SUMMER T.  
"★" apparaît et l'heure d'été est indiquée.  
Pour désactiver l'heure d'été, appuyez une nouvelle fois sur D.S.T./SUMMER T.

**Réglage de la luminosité du rétroéclairage**  
Réglez **BRIGHTNESS** sur H (élevée) ou L (faible) selon vos préférences.

## Fonctionnement de la radio

## Accord manuel

- Appuyez sur **RADIO ON** pour allumer la radio.  
L'afficheur indique la gamme et la fréquence pendant quelques secondes puis l'heure actuelle apparaît.
- Appuyez de façon répétée sur **BAND** pour sélectionner la gamme souhaitée.
- Utilisez **TUNING** + ou – pour accorder la station.  
L'intervalle d'accord FM est réglé sur 0,1 MHz et l'intervalle d'accord AM (PO) est réglé sur 10 kHz (Modèle pour l'Amérique du Nord et du Sud).  
L'intervalle d'accord FM est réglé sur 0,05 MHz\* et l'intervalle d'accord AM (PO) est réglé sur 9 kHz (Autres modèles).

\* L'indication de la fréquence FM augmente ou diminue par incréments de 0,1 MHz. Par exemple, les fréquences 88.00 et 88.05 MHz sont toutes deux indiquées par "88.0 MHz".

Deux brefs bips retentissent lorsque la fréquence inférieure de chaque gamme est accordée.

- Réglez le volume avec **VOL**.
- Pour éteindre la radio, appuyez sur **RADIO OFF** et ICF-C253L.
- Pour utiliser un écouteur, branchez l'écouteur sur la prise (écouteur). Le haut-parleur est désactivé lorsqu'un écouteur est raccordé (modèle ICF-C253 pour l'Europe seulement).
- Pour améliorer la réception FM: Déployez complètement le fil antenne FM pour accroître la sensibilité de la réception. AM(PO)/GO: Tournez l'appareil à l'horizontale pour une meilleure réception. Une barre de ferrite se trouve dans l'appareil.

Pour éviter toute interférence pendant la réception, ne pas utiliser l'appareil sur un bureau d'acier ou une surface métallique.

- Pour contrôler la station reçue, appuyez légèrement sur + ou – **TUNING**. La gamme et la fréquence restent affichées pendant quelques secondes puis l'heure actuelle réapparaît.
- Si l'alarme radio se déclenche lorsque la radio fonctionne, la station préréglée sur la touche 1 (**WAKE UP STATION**, station de réveil) sera accordée.

## Accord de stations préréglées

Vous pouvez préréglér un total de 5 stations en vue d'un rappel par une seule touche, soit une station sur chaque touche de préréglage 1 à 5.

## Préréglage des stations

Exemple: Pour préréglér la station AM de 1.260 kHz sur la touche de préréglage 2

- Appuyez sur **RADIO ON** pour allumer la radio.
- Accordez la station.  
(Voir "Accord manuel".)
- Tenez la touche **STATION-SELECT/PRESET** souhaitée enfoncée (dans ce cas, 2) jusqu'à ce que vous entendiez deux brefs bips.

- L'heure de l'alarme dans **ALARM MODE A RADIO** et **ALARM MODE B BUZZER** a été réglée sur AM 12:00 ou 0:00 en usage.

Lorsque l'alarme s'active à l'heure préréglée, l'indicateur d'alarme clignote.

Pour l'alarme sonnerie, le bip de l'alarme devient plus rapide après quelques secondes en cinq étapes progressives.

- Lorsque les alarmes radio et sonnerie sont réglées à la même heure et que vous choisissez **ALARM MODE A+B**, la radio a priorité.

## Pour changer une station préréglée

Accordez manuellement la station que vous voulez préréglér et maintenez la pression sur la touche jusqu'à ce que deux brefs bips retentissent. La station précédemment mémorisée sera remplacée par la nouvelle.

## Accord d'une station préréglée

- Appuyez sur **RADIO ON** pour allumer la radio.
- Appuyez sur **STATION-SELECT/PRESET** sur laquelle la station souhaitée est mémorisée.
- Ajustez le volume avec **VOL**.  
L'heure réapparaît en l'espace de quelques secondes mais le numéro de préréglage reste affiché.

## Réglage de l'alarme

Avant de régler l'heure pour les alarmes radio et sonnerie, assurez-vous de bien avoir réglé l'heure actuelle (Voir "Réglage de l'heure et de la date").

## Pour régler l'heure de l'alarme

- Meltez la molette de réglage de l'alarme sur **ALARM TIME SET A** (radio) ou **ALARM TIME SET B** (sonnerie).  
Après un bip, l'indicateur ou et l'heure de l'alarme réglée antérieurement clignotent sur l'afficheur.
- Appuyez sur **CLOCK** + ou – jusqu'à ce que l'heure souhaitée apparaisse. Si vous maintenez **CLOCK** + ou – enfoncée, l'heure affichée changera d'abord par incréments d'une minute puis, quelques secondes plus tard, par incréments de dix minutes.

- Mettez la molette de réglage de l'alarme sur **ALARM MODE OFF**. Deux brefs bips confirment le réglage.

- Lorsque la molette de réglage de l'alarme est mise sur **ALARM TIME SET A** ou **B**, la radio s'arrête.

## Pour activer l'alarme

Meltez la molette de réglage de l'alarme sur le mode d'alarme souhaité (radio, sonnerie ou radio et sonnerie). Le ou les indicateurs choisis(s) s'allume(nt).

Alarme	Meltez la molette de réglage de l'alarme sur	Indicateur éclairé
Radio	<b>A RADIO</b>	
Sonnerie	<b>B BUZZER</b>	
Radio et Sonnerie	<b>A + B</b>	

Lorsque l'alarme radio se met en marche, la station radio préréglée sur la touche de préréglage 1 (**WAKE UP STATION**) est accordée à l'heure préréglée.  
Pour l'alarme radio, veillez à préréglér une station radio sur la touche de préréglage 1 (Voir "Accord de stations préréglées")

## Pour vérifier l'heure de l'alarme

Appuyez sur **ALARM TIME CHECK**.  
L'heure de l'alarme est affichée pendant quelques secondes puis l'heure actuelle réapparaît. Lorsque la molette de réglage de l'alarme est sur **ALARM MODE OFF** ou **ALARM MODE A + B**, l'heure de l'alarme dans **ALARM MODE A RADIO** et **ALARM MODE B BUZZER** apparaît.

- L'heure de l'alarme dans **ALARM MODE A RADIO** et **ALARM MODE B BUZZER** a été réglée sur AM 12:00 ou 0:00 en usage.

## ALARME ACTIVÉE—

Lorsque l'alarme s'active à l'heure préréglée, l'indicateur d'alarme clignote.

Pour l'alarme sonnerie, le bip de l'alarme devient plus rapide après quelques secondes en cinq étapes progressives.

- Lorsque les alarmes radio et sonnerie sont réglées à la même heure et que vous choisissez **ALARM MODE A+B**, la radio a priorité.

## Pour sommeiller quelques minutes de plus

Appuyez sur **SNOOZE/DATE/SLEEP OFF**.  
La radio s'éteindra ou la sonnerie s'arrêtera mais l'alarme se déclenchera de nouveau 8 minutes plus tard environ. A chaque pression de **SNOOZE/DATE/SLEEP OFF**, le temps change de la façon suivante:

8 → 16 → 24 → 32  
→ 40 → 48 → 56 → 60

Le temps de l'alarme répétée est indiqué pendant quelques secondes, puis l'heure actuelle réapparaît.





- 1 Drücken Sie **RADIO ON**, um das Radio einzuschalten.
- 2 Drücken Sie **STATION•SELECT/ PRESET**, unter der der gewünschte Sender gespeichert ist.
- 3 Stellen Sie mit **VOL** die Lautstärke ein. Nach einigen Sekunden erscheint wieder die Uhrzeit; die Stationsnummer bleibt jedoch weiterhin angezeigt.

$$\begin{array}{ccccccc} 8 & \rightarrow & 16 & \rightarrow & 24 & \rightarrow & 32 \\ \boxed{\phantom{0000000}} & & & & & & \\ \rightarrow & 40 & \rightarrow & 48 & \rightarrow & 56 & \rightarrow 60 \end{array}$$